

Spindle does not retract

	Probable Cause	Check	Remedy
Solenoid-operated continuously or will not retract. Check for leaks.	air valve or poppet valve not working. Check Switch or valve actuators.	Air Repair	exhausts from advance valve or replace valve. Recheck for adjustments. Readjust.
Defective Replace	"O" rings. "O" ring seals in cylinder assembly and/or directional valve assembly. - Ref. Cylinder Assy. Bul. and Directional Valve Bul.	Check	